

User's Manual

Product Introduction

Thank you for using the new generation digital webcam. This webcam works with a USB port to be connected with PC. It is an ideal webcam for its plug and play and real-time transmission. Its mini size, easily carrying, high resolution and high speed make your life more colorful and make your long distance communications fresh and vivid.

Technical Specification

- * High Resolution CMOS Color Sensor
- *Resolution: 300k pixel (interpolated 5M)
- *Video Format: 24bit True Color
- * Interface: 2.0
- *Transmission Speed:

320*240	30frames/second
640*480	10frames/second
2560*1920	6frames/second
- * Dynamic Range: ≥ 72 db
- * Imaging Distance: 5CM to infinity
- * Built-in Image Compression
- * Automatic White Balance
- * Automatic Color Compensation
- *Manual Snapshot (Snapshot button is necessary for this)
- * Built in (internal microphone)


System Requirement

- *IBM PC compatible computer or notebook with USB port


- * Pentium200 or Higher CPU
- * WIN 2000/XP/VISTA System
- * Hard Drive Remaining Space \geq 20MB
- * CD—ROM Drive
- * Internal Storage \geq 32MB
- VGA Display Card Available for DIRECTX

Driver Installation (WINS XP)

1. Connect webcam to PC. After hardware founded, put “CD Driver” disk in the CD-Rom and an interface as below would come out automatically.

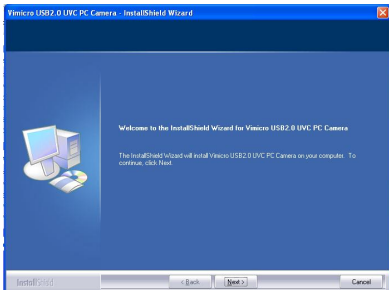


Click“NEXT”

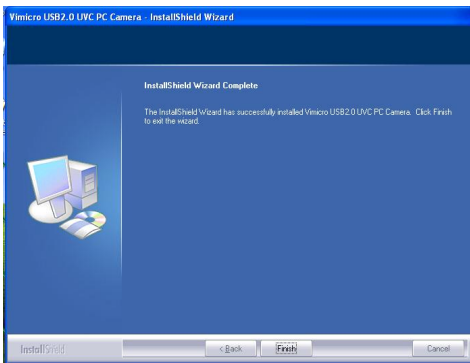

Click“Finish”


2. Click“Start”——“Process”——“Vimicro USB2.0UVC PC Camera/vmcap”. You will see your image. You can click “Options” to set the image. You can select your favorite face when you are directly opposite to the webcam. Face effect only available for the image of 640*480.

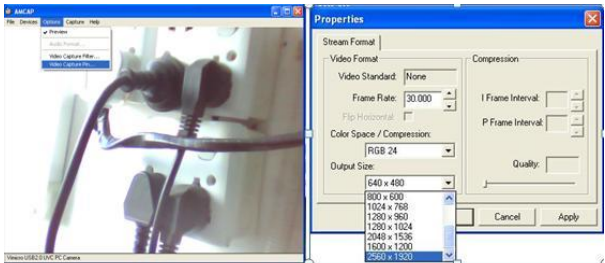


Driver Installation (WINS VISTA)

Click” Windows vista”


3. Connect webcam to PC. After hardware founded, put “CD Driver” disk in the CD-Rom and an interface as below would come out automatically.

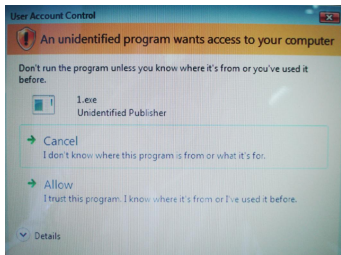

Click: “Allow.....”



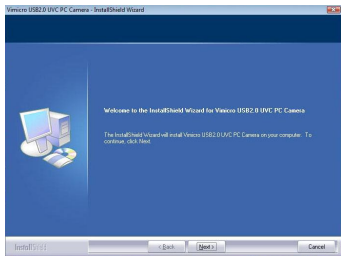


Click“NEXT”

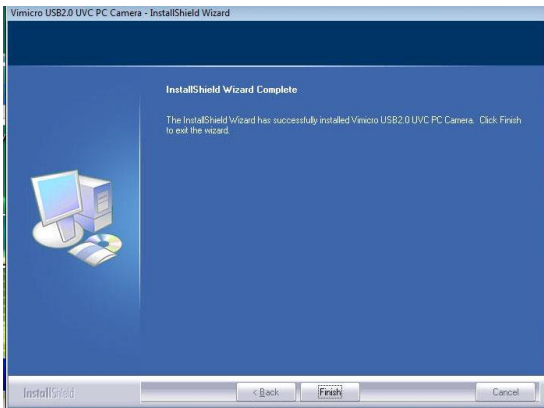


Click“Finish”

4. Click“Start”——“Process”——“Vimicro USB2.0UVC PC Camera/vmcap”. You will see your image. You can click “Options” to set the image. You can select your favorite face when you are directly opposite to the webcam. Face effect only available for the image of 640*480.

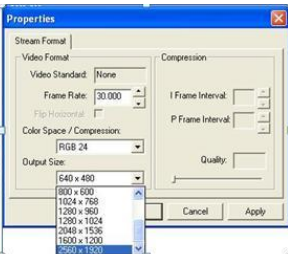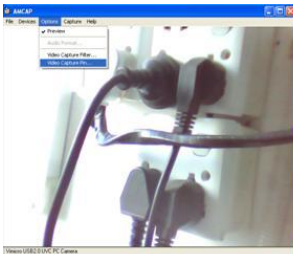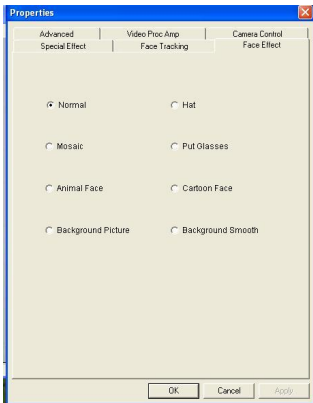

You can choose different Still Image Pixels in the lower right corner of the computer after installing the driver.

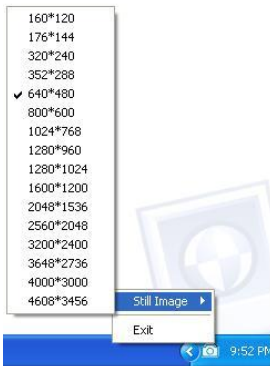

Notice:

- ✧ Don't use fingers or any other sharp or coarse items to touch the camera. Soft
- ✧ cotton cloth is highly recommended to clean the optics parts.
- ✧ Don't use this product when ambience is too hot or cold or dusty.
- ✧ Please avoid this product dropping heavily. Heavily dropping will cause it not to work well.